



ENGLISH

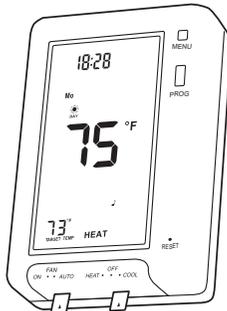

Operation 8035C

ritētemp

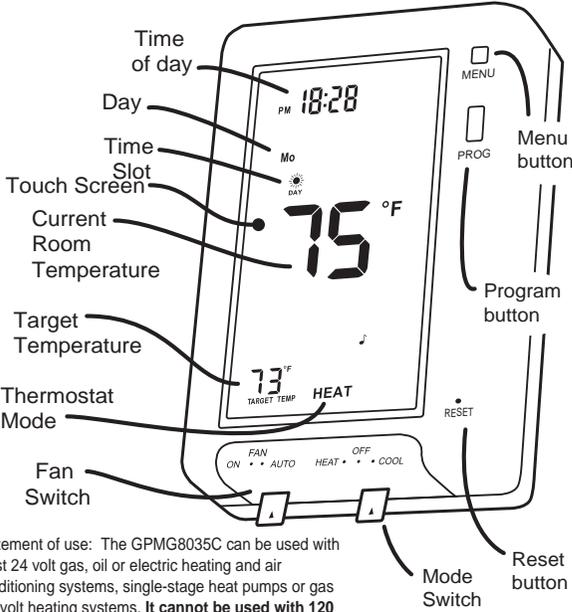

Statement of use: The GPM8035C can be used with most 24 volt gas, oil or electric heating and air conditioning systems, single-stage heat pumps or gas millivolt heating systems. It cannot be used with 120 volt heating systems or multistage heat pumps.

Using a TOUCH SCREEN

Please take a moment to try out your touch screen itself.


To select a function on the touch screen, place your finger on the main temp display and give a short firm push. Try a "tap" of the finger or stylus. Your input must last long enough for the system to determine it is not an accidental 'bump'.

Using the stylus is more comfortable for some users. Again allow the system enough time to recognize your inputs. When you are comfortable with touch inputs, proceed.

Basic Screens

The **MODE SWITCH** of the 8035C must be in the **HEAT** or the **COOL** position to access all control functions. The 8035C Thermostat has 3 basic screens. The **HOME** screen is displayed when unit is operating your system.

Touching the  will always return you to this screen.

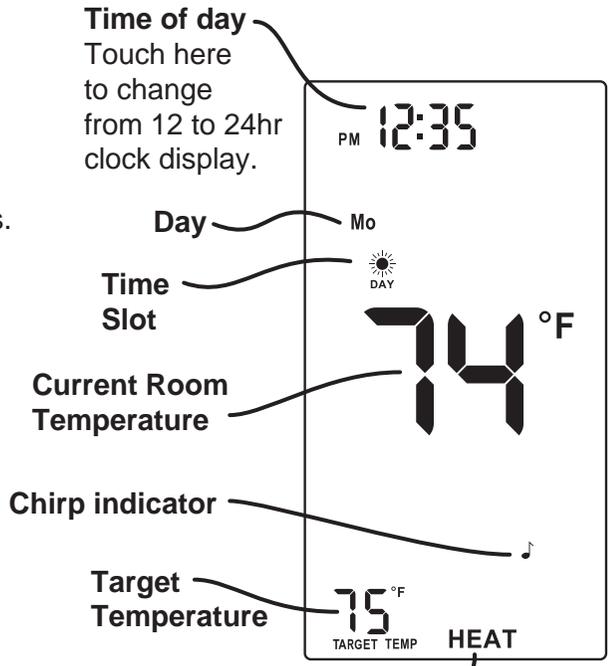

HOME screen


Thermostat Mode

MENU screen

Displayed when the MENU button is pressed from the HOME screen.

Set Time
Touch this area to set the time of day.
Left arrow goes back, right arrow goes forward.

Filter Timer set
Return HOME

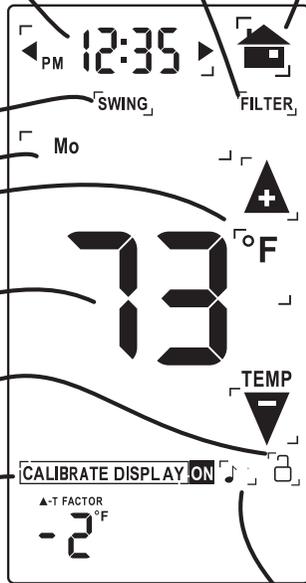

Temperature Swing set

Set Day
Touch this area to set the day of the week.

Set °C -°F
Touch this to set temperature display.

Calibration
Use this to calibrate your LCD display to match another thermometer.

Lock Program
Touch for 5 sec to lock or unlock

Calibration indicator
This comes on if you have altered the calibration of your unit

Chirp set Touch this to turn the audible chirp on or off.

PROGRAM screen


Displayed when the PROGRAM button is pressed from the HOME screen.

Return HOME When programming is complete touch this to run your program.

Set Program Time - touch this area to set the time of day you want eachtime period to start.
Left arrow goes back, right arrow goes forward.

Copy
Touch this area to copy current program to the next day

Review - touch this area to auto cycle through your program.

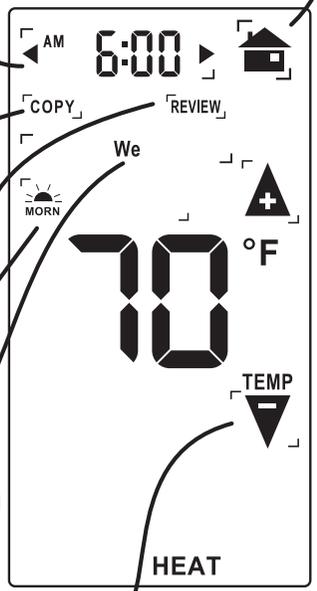

Set Time Slot
Touch this area to set the Time Slot you want to program.

Set Program Day
Touch this area to set the day of the week you want to program Target Temps for.

Temp Up / Temp Down arrows.
Touch these to raise and lower each Target Temp

1 Configure

NOTE: The Mode Switch must be in **HEAT** or **COOL** mode to configure.

ï Press **MENU** to configure the thermostat (from **HOME** screen).

ï **Set day of the week** -

Su Mo Tu We Th Fr Sa

Touch the **Day of the week** area to cycle through the days of the week to select the current day.


ï **Set time of day** -

Touch the **Time of Day** arrows to move the time selection forward or backward until it displays the current time. Touch and hold for faster setting.



ï **Set °C - °F display**

Touch the °F and it will toggle to °C.

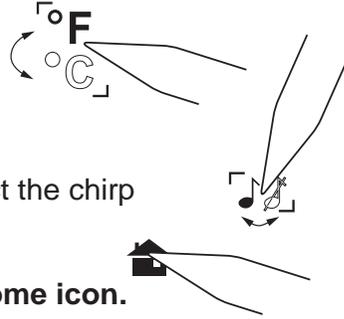

ï **Set audible chirp** -

Touch the musical note icon to select the chirp or no chirp.

ï **Return HOME** by touching the home icon.

PG 5

2 Auto-run

This Thermostat comes preprogrammed with an Energy-Star™ approved program. This program is recommended by the EPA for energy efficiency.



We strongly recommend that you Auto-Run this program for one week, and see if it works for you. If it does not fit your needs you can always input a custom program.

ï To Auto-Run the Energy-Star™ program, select **HEAT** or **COOL** with the mode switch. The unit is now running the Energy-Star™ program.

ï The clock is displayed on the top. The ambient temperature is displayed in the center of the LCD touch screen. The **TIME SLOT** icon indicates the **TIME SLOT** active in the Energy-Star™ program.

ï The programmed temperature is shown on the lower right. For program details refer to the Energy-Star™ program chart below.

HEAT	MORN	DAY	EVEN	NITE	COOL	MORN	DAY	EVEN	NITE
	6:00am	8:00am	6:00pm	10:00pm		6:00am	8:00am	6:00pm	10:00pm
All Days	70°F	62°F	70°F	62°F	All Days	78°F		85°F	78°F


PG 6

3 Program

NOTE: 60 Second Rule-During programming, if a button is not pushed in 60 seconds, the unit will return to the home screen. Everything you have changed while programming will automatically be saved.

- Press **PROGRAM** to go to the programming screen.
- Select **HEAT** with the **HEAT/Cool MODE** switch.

 Su Mo Tu We Th Fr Sa



- Select the day you want to program -
Touch the **Day of the week** area to cycle through the days of the week to select the desired day.

MORN DAY EVEN NITE



- Select the time slot you want to program -
Touch the **Time slot** area to cycle through the 4 time slots, until it displays the desired time slot.

AM 1:00

Backward Forward




- Select the time of day -
Touch the **Time of Day** arrows to move the time selection forward or backward until it displays the desired time.

PG 7

3 Program cont.

- Select the desired temperature -
Touch the **UP temp / Down temp** arrows.

TEMP

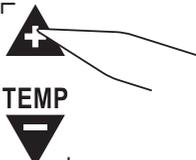

Repeat the above procedures for each day of the week and each time slot of the day as desired.

- To **REVIEW** your program touch **REVIEW**. Each time slot for each day or set of identical days, will be displayed every 3 seconds.

- Return **HOME** by touching the home icon.



- To **COPY** the program from the current day to another day

Touch **COPY** on the program screen. The current day will remain solid, the destination day will flash.

Touch the day area to advance the day and select a copy destination.

Touch **COPY** again to copy all settings to the destination day.

Su Tu



To program for cooling -

- Select **COOL** with the Heat/Cool MODE switch and repeat the above procedure.

PG 8


The 8035C has 3 manual override commands. These are accessed by touching the Current Temp Display at the HOME screen (center of screen).

Target Temperature

HOLD
Touch this area to set a comfortable target temp for the system to hold until you return and remove **HOLD**.

Temp Up / Temp Down arrows
Touch these to raise and lower the manual override Target Temp.

Manual Override indicator
Shows you have temporarily modified the Target Temp.

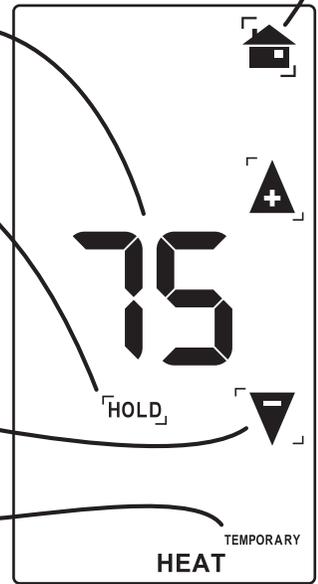

MANUAL Temporary Override screen

Manual cont.

TEMPORARY Override -

- ï At the Manual override screen, Touch the **Temp Up / Temp Down** arrows to select your desired temporary Target Temperature.
 - ï Touch HOME to return to operation.
- The TEMPORARY icon will go on indicating you have modified the Target Temp for the current Time Slot only.



HOLD -

- ï At the Manual override screen, Touch HOLD to initiate a hold temperature.
 - ï Touch the **Temp Up / Temp Down** arrows to select your hold temperature.
 - ï Touch HOME to return to operation.
- The HOLD ON icon will flash indicating you have changed the Target Temp.
- The system will HOLD this temperature until you return to this screen and *de-select* HOLD, by touching the HOLD icon again.



NOTE: The Mode Switch must be in HEAT or COOL mode to override.

4 Special Features

Swing

- Swing setting determines the temperature difference from ON to OFF that the thermostat will command the HVAC system to run.
- With the MODE switch in HEAT or COOL, press the **MENU** button.
- Touch the **SWING** icon and the current setting of temp swing is shown on the display (default at 3).
- To change the swing, touch the left or right arrows. The furnace will cycle more at the lower numbers as it tries to keep your set point constant.

SWING



3



Filter

The 8035C has a feature that keeps track of actual furnace run time and reminds you to periodically replace your system's air filter.

- Press **MENU** (from HOME screen) and touch **FILTER** icon. This will display your accumulated filter run time.
- To input a new filter life time, touch the **FILTER** icon for 3 seconds.
- Input the lifetime hours for your new filter.
- To zero the filter timer for a new filter, touch the accumulated time display.
- To leave the filter display, touch **HOME**

FILTER



250



PG 11

4 Spec. Featr. cont

Lock

Allows you to prevent any changes in custom settings.

- To lock, touch the LOCK icon on the MENU screen for 5 sec.
- To unlock, Touch the locked icon for 5 sec.



Low Battery

- When the batteries are low, the battery icon will come on and flash. The two AA Batteries in the unit need to be replaced. In some installations your heater system will stop functioning when the thermostat loses power. **Replace batteries as soon as you see this warning.** The thermostat programs will remain for 30 seconds while the batteries are changed.
- **Do not take longer than 30 sec** to change the batteries in your unit or you will lose all custom settings and all programming. Only the Energy-Star™ program will remain. Once the batteries are replaced, the system will return to normal in 2 seconds.



12/24 hour

ï The thermostat can display time in 12 or 24 hour formats. At the HOME screen touch the time display to toggle from 12 to 24 hr display.

Calibration

NOTE: Your thermostat comes from the factory calibrated to + or - 1^oF actual temperature. It is an accurate instrument. If you want your thermostat to display the same temperature as another thermometer in your home, you can adjust its calibration.

To change the calibration:

ï The unit must be in the HEAT or COOL mode.

ï Press the **MENU** button.

ï Touch the Temp Up/Temp Down arrows to adjust the temperature reading.

ï **CALIBRATE DISPLAY ON** will appear.

ï Touch HOME to save the new setting.

CALIBRATE DISPLAY ON

Δ-T FACTOR
-2^oF

PG 13

